


To fit the attachment to the truck, slide the forks into the fork pockets until they are fully engaged. Pin the scoop behind the heel to retain the attachment on the forks.

To fill the bucket and pick up a load of material, the material should be approached with the bucket at ground level. The truck is driven carefully forward, with the mast as near upright as possible until the bucket fills. The forks can then be raised and the material transported as required.

The ideal scoop dedicated handling of sands and aggregates, hydraulic operation allows truck driver to remain seated at all times.

Fork mounted, hydraulically operated, calibrate by trading standards department. Requires auxiliary hydraulic valve on truck to operate.

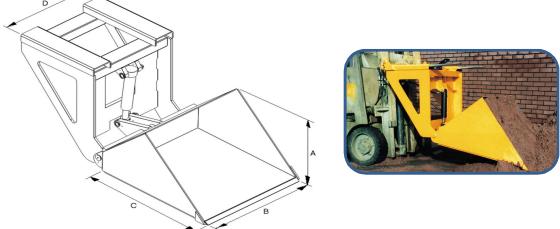

| Model   | Volume | Capacity | Height<br>(A) | Width<br>(B) | Length<br>(C) | Pocket Length<br>(D) |
|---------|--------|----------|---------------|--------------|---------------|----------------------|
| FMS 20H | 0.20m³ | 300kg    | 505mm         | 800mm        | 930mm         | 645mm                |
| FMS 40H | 0.40m³ | 600kg    | 608mm         | 1000mm       | 1170mm        | 645mm                |
| FMS 50H | 0.50m³ | 750kg    | 608mm         | 1250mm       | 1170mm        | 645mm                |

| Model   | Weight | C of G<br>(Min) | C of G<br>(Max) | Load Centre |
|---------|--------|-----------------|-----------------|-------------|
| FMS 20H | 0.20m³ | 300kg           | 505mm           | 800mm       |
| FMS 40H | 0.40m³ | 600kg           | 608mm           | 1000mm      |
| FMS 50H | 0.50m³ | 750kg           | 608mm           | 1250mm      |



## www.forklift-attachments.co.uk



Contact Attachments Ltd | Unit E Mochdre Industrial Estate | Newtown | Powys | SY16 4LE T:01686 611200 | Fax:01686 611201 | E:sales@forklift-attachments.co.uk