

CONTAINER WAND APPLICATIONS





Full body harness with self-retracting life line connected to back D ring of harness and carabiner.



Connecting the double lock snap of the SRL to the anchor ring of GM120 Top Lock Wand.




GM120 Top Lock Wand, yellow; GM121 End Lock Wand, red; GM120CB Bag; GM121CB Bag




Extracting sufficient amount of webbing from SRL to allow worker to reach out and insert wand head into corner casting.



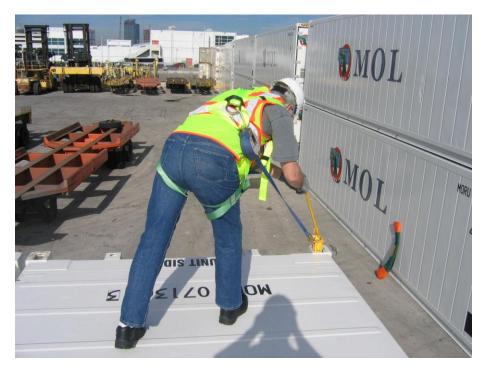

Inserting GM120 Top Lock Wand into corner casting while standing 3' from the end and side leading edge.

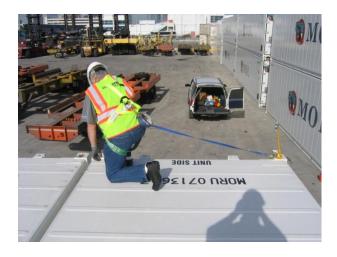

GM120 Top Lock Wand properly locked into corner casting and worker positioned correctly one container width away.



Worker working correctly one container width away and unlocking twist locks below with telescopic pole.





Connecting double lock snap of SRL to anchor portion of GM121 End Lock Wand.





Inserting head of GM121 End Lock Wand into wrong outside edge hole of corner casting.



Inserting head of GM121 End Lock Wand into correct inside edge hole of corner casting.





GM121 End Lock Container Wand locked into corner casting and worker positioned correctly one container wide away.





Corner casting of shipping container showing side hole and end hole.



GM184 Top Access End Lock Wand with GM184CB bag




Head and jaw of the GM184 Top Access End Lock Wand



Connecting a couble lock snap of SRL to anchor point of GM184 Top Access End Lock Wand.



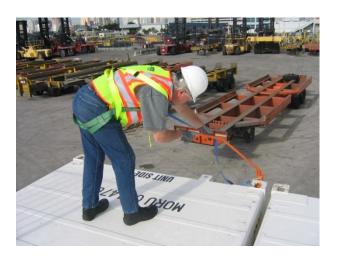


Inserting GM184 Top Lock Access End Lock Wand into end hole of corner casting while standing 3' from the end side leading edge.



GM184 Top Access End Lock Wand and container twist lock mechanism locked into same corner casting.



GM184 Top Access End Lock Wand locked into end hole of corner casting.

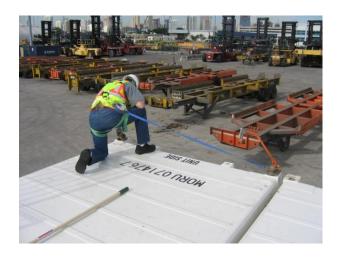

GM184 Top Access End Lock Wand and twist lock mechanism locked into the same corner casting and worker positioned correctly one container width away.

